

## To program repeater 146.985, minus offset, 100 Hz tone, low power, into Channel 003

Turn radio on.

If in Channel Mode switch to Frequency Mode press [MENU + TDR]

To Select 5 KHz Step press [MENU + 1 + MENU] [Use the <> key for 5k] [MENU + EXIT]

Enter - 146.985

Press [MENU] + 4 + [MENU]

Press [MENU] + [EXIT]

Press [MENU] + 8 + [MENU]

Press [MENU] + [EXIT]

Press [MENU] + 1 + 6 + [MENU]

Press [MENU] + [EXIT]

Press [MENU] + 2 + 7 + [MENU]

The receive frequency

Use the <> key to select Power Setting

To accept and exit

Use the <> key to select Wide Bandwidth

To accept and exit

Use the <> key to select 100Hz Tone

To accept and exit

Enter 003 or rotate the Rotary Encoder or use the <> key to select 003

Press [MENU] + [EXIT]

This stores the receive frequency

Radio prompts that REC FREQ has been stored

Enter - 146.385

Press [MENU] + 2 + 7 + [MENU]

+ [MENU] + [EXIT]

The transmit frequency

Radio prompts that TX FREQ has been stored

**Remember to return to Channel Mode or you will think nothing has happened**

**[www.dbjre.com](http://www.dbjre.com) - 888-325-7234**

A favorable mention of dBj, and the radio to eHam.net's review section will be greatly appreciated